

THE " ILLUMINATOR PRO " TURN SIGNAL CANCELLOR WITH BUILT IN LOAD EQUALIZER , FRONT RUN & TURN AND REAR RUN , BRAKE & TURN FUNCTIONS.

PLEASE MAKE SURE YOUR CUSTOMER RECEIVES A COPY OF THIS PAGE ON

FEATURES AND OPERATION OF THIS MODULE.

READ ALL OF THE INSTRUCTION SHEETS BEFORE YOU INSTALL THIS MODULE !

THIS MODULE IS DESIGNED FOR HARLEY-DAVIDSONS AND CUSTOM BUILT HARLEY TYPE V-TWIN MOTORCYCLES ! THIS MODULE IS DESIGNED TO WORK WITH MOMENTARY TURN SIGNAL BUTTONS / SWITCHES THAT ARE MOMENTARILY ACTIVE !

TECH TIPS

- TAKE YOUR TIME ! PLAN ON THE BETTER PART OF A DAY TO INSTALL THIS !
- USE HEAT SHRINK AND AVOID SHARP CORNERS WHEN ROUTING YOUR WIRES. USE EXTRA CAUTION UNDER THE REAR FENDER , MAKE SURE THE TIRE WILL NOT RUB THE INSULATION OFF THE WIRE AND CAUSE A SHORT !
- AFTER YOU HAVE INSTALLED THIS MODULE AND ARE READY TO TEST THE FUNCTIONS OF THIS MODULE , IT IS IMPORTANT TO HAVE A FULLY CHARGED BATTERY , ESPECIALLY WITH LED TURN SIGNALS .

FEATURES & OPERATION :

- THIS MODULE ALLOWS YOUR TURN SIGNALS TO FLASH FOR 11 SECONDS AND THEN WILL AUTOMATICALLY CANCEL THE TURN SIGNALS . A MOMENTARY BLIP OF THE TURN SIGNAL BUTTON AND THE MODULE WILL DO THE REST .
- IF YOU MAKE A QUICK LANE CHANGE , BLIP THE BUTTON A SECOND TIME , AND IT WILL DISCONTINUE THE 11 SECOND TIMED FLASHING .
- TO GAIN ADDITIONAL TIME , (LONG LIGHT) MERELY BLIP THE BUTTON AGAIN AFTER THE FLASHING HAS STOPPED , OR , ONCE YOU'RE ON THE MOVE .
- THIS MODULE TURNS THE FRONT SINGLE ELEMENT BULBS OR LEDS INTO RUNNING LIGHTS AS WELL AS MAINTAINS YOUR TURN SIGNAL FUNCTION .
- THIS MODULE ALSO TURNS THE REAR TURN SIGNALS INTO RUNNING LIGHTS , BRAKE LIGHTS AND MAINTAINS YOUR TURN SIGNAL FUNCTION .
- THIS MODULE HAS A BUILT IN EMERGENCY FLASHER MODE , DEPRESS BOTH BUTTONS SIMULTANEOUSLY , THEN LET OFF SIMULTANEOUSLY . REPEAT THIS SEQUENCE TO SHUT OFF THE EMERGENCY FLASHER MODE .
- THIS MODULE HAS A BUILT IN SOLID STATE FLASHER & BUILT IN " LOAD EQUALIZER " . IT IS DESIGNED TO RUN A SINGLE STRIP OF LED TURN SIGNALS , AND UP TO 100 WATTS OF TURN SIGNAL COMBINATIONS PER SIDE . DO NOT RUN MORE THAN 100 WATTS PER SIDE OR MORE THAN 50 WATTS PER CORNER (NOT MORE THAN 50 WATTS ON EACH OUTPUT TURN SIGNAL WIRE / OR STATION) . IF YOU DO , OUR TEST BOARD CAN DETECT THIS AND WILL VOID THE WARRANTY OF THIS MODULE.

PAGE 1 (OVER)

WWW.BADLANDSMOTORCYCLEPRODUCTS.COM